



 







 










 







 
 







 

 

Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Jump	 Back
 -/--	 Shift + Guide
 S.Mode	 Shift + Dual
 I-II	 Dual
 P.Mode	 Format

Original	Replacement
 Guide	 Guide
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Input	 AV
 Menu	 Menu
 Fav. CH	 Pre Ch
 Vol. +	 Vol +
 Vol.-	 Vol -
 CH. +	 Ch +
 CH.-	 Ch -
 Rec	 Rec
 DTV / Radio	 TV/R
 Sleep	 Sleep





Original	Replacement
 Subtitle	 Subt
 P.Size	 Eject
 Subpage	 Shift + Subt
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 [≡i]	 Smart
 [≡?]	 Media
 [≡↓]	 3D
 [≡□]	 Shift + Stop
 [≡] / [/≡]	 Text
 Stop	 Stop
 Play/Pause / Timeshift	 Play
 Play/Pause / Timeshift	 Pause
 Info	 Info
 I<<	 I<<

Original	Replacement
 >>I	 >>I
 <<	 <<
 >>	 >>

