

 



 


 
 

 
 

 

 
















 
 
 
 
 
 









 

 











 










Original	Replacement	Original	Replacement
	Power		Power
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	TV		TV/R
	Mute		Mute
	>><		Smart
	...		Media
	▲		Up
	▲		Ch +
	▼		Down
	▼		Ch -
	-		Left
	-		Vol -
	+		Right
	+		Vol +
	□		Ok
	□		Menu
	TXT		Text
	[]		Stop
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[/ =]		Shift + Text
	Cancel		Exit
	[↑ ↓]		3D





Original	Replacement	Original	Replacement
	SETTINGS OPT Options		
	PICTURE FORMAT Format		
	DISPLAY INFO Info		

