


 

 
 


 

 

 

 

 

 

 



 















 

 









 

 





 

 
 


 

 


 



 

 

 

 









Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Input		AV
	AD		Shift + Subt
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Quick		Smart
	P+		Ch +
	P-		Ch -
	Guide		Guide
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Ok		Ok
	[i+]		Info
	Return		Back
	Red/Root		Red
	Green/Contents		Green
	Text		Text
	Yellow/Top		Yellow
	Blue/Dvd		Blue
	Audioool/II		Dual




 

 
 


 

 

 

 

 

 

 







 






 





 







 
 
 
 
 

 
 
 

 
 




 





Original	Replacement	Original	Replacement
 Subtitle/SetUp	 Subt		
 [I<>I]	 Options		
 Eject/Menu	 Menu		
 Stop/ATV-DTV	 Stop		
 Play/List	 Play		
 Pause/II>/▼	 Pause		
 I<< / [≡?]	 I<<		
 >>I / [⊖][≡X]	 >>I		
 << / [≡□]	 <<		
 >> / [≡⇅]	 >>		

 

 





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Input		AV
	Vol+		Vol +
	Vol		Vol -
	Mute		Mute
	Quick		Smart
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Ok		Ok
	[i+]		Info
	Return		Back
	Yellow/Top		Yellow
	Blue/Dvd		Blue
	Audioool/II		Dual
	Subtitle/SetUp		Subt
	[I<>I]		Options
	Eject/Menu		Menu
	Stop/ATV-DTV		Stop
	Play/List		Play
	Pause/II>/V		Pause
	I<<		I<<
	>>I		>>I






 

 

 


 




 

 

 



 
 
 

 

 

 



 



 

 







 



 

 
 
 



 








	Original	Replacement		Original	Replacement
	<<	 <<			
	>>	 >>			

 
 
 
 


 

 

 
 




Original		Replacement		Original		Replacement	
	Power		Power		P-		Ch -
	1		1		Up		Up
	2		2		Down		Down
	3		3		Left		Left
	4		4		Right		Right
	5		5		Ok		Ok
	6		6		[i+]		Info
	7		7		Return		Back
	8		8		Red/Root		Red
	9		9		Green/Contents		Green
	0		0		Yellow/Top		Yellow
	Input		AV		Blue/Dvd		Blue
	Vol+		Vol +		Audio ool/II		Dual
	Vol-		Vol -		Subtitle/SetUp		Subt
	Mute		Mute		[I<>I]		Options
	Quick		Smart		Eject/Menu		Menu
	P+		Ch +		Stop/ATV-DTV		Stop





Original	Replacement	Original	Replacement
 LIST	Play/List	 PLAY MODE	Play
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Pause/II>▼		Pause

