






 

 

 



 

 

 

 
 




 



 
 

 

 


 

 

 




 





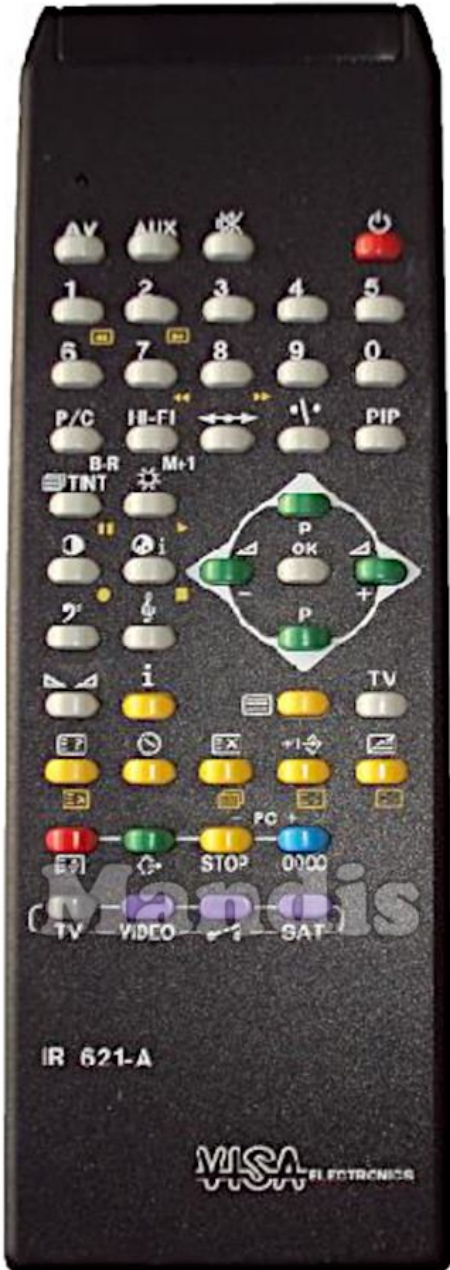 


Original	Replacement	Original	Replacement
	Power		Power
	AV		AV
	Aux		Shift + AV
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P/C / B-R		Pre Ch
	HIFI M+1		Smart
	·\·		Media
	PIP		Guide
	TINT		3D
	*		Options
	○		Shift + Options
	○i		Subt
	Fa		Dual
	Sol		Shift + Dual
	←•→		Shift + Smart
	i		Info
	Text		Text
	TV		TV/R
	Up / P+		Up
	Up / P+		Ch +
	Down / P-		Down
	Down / P-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +





Original	Replacement	Original	Replacement
 Left / Vol-	 Left		
 Left / Vol-	 Vol -		
 OK	 Ok		
 Reveal	 Menu		
 Sleep	 Sleep		
 Text Cancel	 Exit		
 +1 Input	 +  Shift + Media		
 Mix	 +  Shift + Text		
 Red / Text Size	 Red		
 Green / Exit	 Green		
 Yellow / Stop / PC-	 Yellow		
 Blue / 0100 / PC+	 Blue		

