
 

 
 
 





 

 



 


 
 
 
 
 
 



 


 
 

 
 

 

 

 
 
 

 

 
 
 

 
 
 
 

 








 

 

 






 





Original	Replacement	Original	Replacement
	Standby - On		Power
	TV / DVD		AV
	Edit		TV/R
	Select		Info
	CH+		Ch +
	Up		Up
	Down		Down
	CH-		Ch -
	Right		Right
	Left		Left
	OK		Ok
	Menu Disc		D. Menu
	Menu System		Menu
	Timer		Sleep
	T/C		Guide
	Browser		Smart
	Tuner		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Stop		Stop
	Play		Play
	Rec		Rec
	Pause		Pause
	Rec Mode		Shift + Rec
	I<<		I<<
	>>I		>>I





Original		Replacement		Original		Replacement	
	Return		Back				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Tv Vol-		Vol -				
	Tv Vol+		Vol +				





Original		Replacement		Original		Replacement	
	Standby - On		Power		7		7
	TV / DVD		TV/R		8		8
	Up		Up		9		9
	CH+		Ch +		0		0
	CH-		Ch -		Rec		Rec
	Down		Down		Return		Back
	OK		Ok		Red		Red
	Menu System		Menu		Green		Green
	Timer		Sleep		Yellow		Yellow
	T/C		Guide		Blue		Blue
	Tuner		Subt		Tv Vol-		Vol -
	1		1		Tv Vol+		Vol +
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				

