



Original	Replacement
Power	Power
Green / Prog.	Green / APP / Repeat
Green / Prog.	TV/Radio /
Yellow / Status	Yellow / YouTube / Repeat
Yellow / Status	Info / Angle
Blue / Guide	Blue / Prime Video / Random
Blue / Guide	Guide / EPG / -/--
Red / Dec.	Red / Netflix / Search
Up	Up
Purple / Text	Display / Media
Purple / Text	Text / Goto
Exit	Exit / Cancel / Clear
Left / I<<	Left
Left / I<<	I<< / Preset-
OK	OK
Right / >>I	Right
Right / >>I	>>I / Preset+

Original	Replacement
Menu	Menu / Home
Vol+	Vol+
Down	Down
PR+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
PR-	CH- / Page-
1	1
2	2
3	3
Index / Mark	Fav / Marker / PC
4	4
5	5
6	6
0000	SHIFT +  Exit / Cancel / Clear
7	7
8	8





	Original	Replacement		Original	Replacement
	9		9		
	SP / LP		Smart / List		
	AV		AV / Input / RDS		
	0 / --		0		
	<< REW.		<< / Tune-		
	Play		Play / Slow		
	>> F.FWD		>> / Tune+		
	Rec.		Rec / Rec Mode		
	Stop		Stop / Hold		
	Pause		Pause / Step / Freeze		

	Original	Replacement		Original	Replacement








Original	Replacement
Power	Power
Green / Prog.	Green / APP / Repeat
Green / Prog.	TV/Radio /
Yellow / Status	Info / Angle
Yellow / Status	Yellow / YouTube / Repeat
Blue / Guide	Blue / Prime Video / Random
Blue / Guide	Guide / EPG / -/--
Red / Dec.	Red / Netflix / Search
Up	Up
Purple / Text	Display / Media
Purple / Text	Text / Goto
Exit	Exit / Cancel / Clear
Left / I<<	I<< / Preset-
Left / I<<	Left
OK	OK
Right / >>I	Right
Right / >>I	>>I / Preset+

Original	Replacement
Menu	Menu / Home
Vol+	Vol+
Down	Down
PR+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
PR-	CH- / Page-
1	1
2	2
3	3
Index / Mark	Fav / Marker / PC
4	4
5	5
6	6
0000	Shift + Exit / Cancel / Clear
7	7
8	8





	Original	Replacement	Original	Replacement
	9	 9		
	SP / LP	 Smart / List		
	AV	 AV / Input / RDS		
	0 / --	 0		
	<< REW.	 << / Tune-		
	Play	 Play / Slow		
	>> F.FWD	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Stop	 Stop / Hold		
	Pause	 Pause / Step / Freeze		

