



 


 
 




 


 














 








 






 



 




	Original	Replacement	Original	Replacement
	Power			Menu
	iPod			Play
	CD			Pause
	USB			>>
	FM			<<
	Phono			Enter
	AUX			Ok
	Preset Up			Vol +
	Preset Down			Vol -
	Tuning Up			Mute
	Tuning Down			Right
	Memory			Left
	Repeat			Smart
	Stop			Info
	Random			Dimmer
	iPod Menu Sel Up			Sleep
	iPod Menu Sel Down			Pure Direct
				Options



Down