





























































































 



 












Original	Replacement	Original	Replacement
 Power	 Power	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Vol+	 Vol+
 2	 2	 Vol-	 Vol-
 3	 3	 CH+	 CH+ / Page+
 4	 4	 CH-	 CH- / Page-
 5	 5	 Audio	 Audio / Lang I/II
 6	 6	 Aspect	 Eject / Surround
 7	 7	 Display	 Display / Media
 8	 8	 Tv/Radio	 TV/Radio /
 9	 9	 Rec	 Rec / Rec Mode
 0	 0	 Up	 Up
 -/--	 Shift + Guide / EPG / -/--	 Left	 Left
 Recall	 Back / Return	 OK/CH List	 OK
 Red	 Red / Netflix / Search	 Right	 Right
 Green	 Green / APP / Repeat	 Down	 Down
 Yellow	 Yellow / YouTube / Repeat	 Menu	 Menu / Home

Original	Replacement	Original	Replacement
 Power	 DIMMER / MUTE	 TV	 DVD
 Mute	 SHIFT	 SAT	 AUX
 1	 SLOW	 STEP-FREEZE	 HOLD
 2	 TUNE-	 REC MODE	 PRESET-
 3	 TUNE+	 PRESET+	 EQ
 4	 TITLE	 SURROUND	 SUBTITLE
 5	 LANG I/II	 SOUND	 AUDIO
 6	 FORMAT	 TIMER	 PROGRAM
 7	 PICTURE	 ZOOM	 SLEEP
 8	 TOP MENU	 TV RADIO	 RDS
 9	 OPT-TOOLS	 D.MENU	 SETUP
 0	 GOTO	 TEXT	 AV INPUT
 -/--	 HOME	 ANGLE	 INFO
 Recall	 MENU	 OK	 RETURN
 Red	 CLEAR	 EXIT	 BACK
 Green	 CANCEL	 LIST	 SMART
 Yellow	 VOL+	 MEDIA	 CH PAGE
	 VOL-	 DISPLAY	 TV
	 CH+	 TV / RADIO	 DVD
	 CH-	 REC MODE	 CD - STB
	 Audio	 Up	 VIDEO
	 Aspect	 Left	 TAPE
	 Display	 Right	 TUNER
	 Tv/Radio	 Down	 AUX - HDD
	 Rec	 OK	 USB
	 Up	 Right	 BLUETOOTH
	 Left	 Down	 HDMI - BAT
	 OK/CH List	 Up	 FC
	Red	 Left	 FAV MARKER
	Green	 Right	 NETFLIX
	Yellow	 Down	 APP
		Menu	 YouTube
		Menu	 Prime Video
		Menu	 SEARCH
		Menu	 REPEAT
		Menu	 REPEAT A-B
		Menu	 RANDOM



