


 


















 




 

 

 

 

 

 

 



 



 





 





 




 
 






Original		Replacement		Original		Replacement	
	Power		Power		Down / CH-		Down
	Mute		Mute		Down / CH-		Ch -
	1		1		Right / Vol+		Right
	2		2		Right / Vol+		Vol +
	3		3		Left / Vol-		Left
	4		4		Left / Vol-		Vol -
	5		5		Enter		Ok
	6		6		Menu		Menu
	7		7		TV / Video		AV
	8		8		Index		Smart
	9		9		Reveal		Media
	0		0		Size		Eject
	Sleep		Sleep		Hold		Stop
	Jump		Guide		Red		Red
	Audio		Dual		Green		Green
	Up / CH+		Up		Yellow		Yellow
	Up / CH+		Ch +		Blue		Blue



