

 




 



 


 
 

 
 
 
 

 



 

 

 

 

 

 



 

 

 
 
 

 
 
 

 

 
 
 

 

 

 
 
 

 



 

 
 
 


Original	Replacement	Original	Replacement
 Power Operate	 Power	 Return	 Shift + Exit
 Eject	 Eject	 Cancel	 Back
 Open/Close	 Mute	 Title Menu/Top	 Menu
 DVD/VCR	 Smart	 Up	 Up
 Timer Rec	 Red	 CH+	 Ch +
 Input Select	 AV	 Down	 Down
 Display	 Info	 CH-	 Ch -
 1	 1	 TRK+	 Vol +
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 TRK-	 Vol -
 5	 5	 Enter	 Ok
 6	 6	 DVD Menu	 D. Menu
 7	 7	 Setup	 Options
 8	 8	 Stop	 Stop
 9	 9	 Play	 Play
 0	 0	 Pause/Still	 Pause





Original	Replacement
 I<</Skip/Index-	 I<<
 <</Search-	 <<
 >>/Search+	 >>
 >>I/Skip/Index	 >>I
 One Touch	 Blue
 CM Skip	 Green
 I> Slow	 Yellow
 Rec/OTR	 Rec
 Rec	 +  Shift + Rec
 Dubbing	 Text
 Audio/Audio	 Dual
 Zoom	 +  Shift + Eject
 A-B Repeat	 +  Shift + Subt
 Zero Return	 Exit
 Angle Counter	 Format
 Subtitle/ATR	 Subt
 Play Mode Repeat	 +  Shift + Options

Original	Replacement
 Clock/Counter	 +  Shift + Dual
 TV/VCR	 TV/R

