
 

 

 

 



 

 

 




 
 











Original	Replacement
DAT/TAPE1	Shift + Red / Netflix /
TAPE2	Shift + Green / APP /
<< Deck A	Down
<< Deck B	Shift + Down
< Deck B	Shift + Left
< Deck A	Left
> Deck B	Shift + Right
> Deck A	Right
>> Deck B	Shift + Up
>> Deck A	Up
TAPE3	Shift + Yellow / YouTube /
Stop Deck A	OK
Stop Deck B	Shift + OK
Pause Deck B	Shift + Pause / Step /
Deck B Rec	Shift + Stop /
Rec Deck A	Rec / Rec Mode
Rec Deck B	Shift + Rec / Rec Mode

Original	Replacement
AUX	Yellow / YouTube / Repeat
Tuner Preset +	Shift + >>I / Preset+
Tuner Preset +	CH+ / Page+
CD	Red / Netflix / Search
Tuner Preset -	Shift + I<< / Preset-
Tuner Preset -	CH- / Page-
Tuner	Green / APP / Repeat
1 Tuner	1
2 Tuner	2
3 Tuner	3
4 Tuner	4
5 Tuner	5
6 Tuner	6
7 Tuner	7
8 Tuner	8
9 Tuner	9
0 Tuner	0





Original	Replacement
 1 CD	 Shift + 1
 2 CD	 Shift + 2
 3 CD	 Shift + 3
 4 CD	 Shift + 4
 5 CD	 Shift + 5
 6 CD	 Shift + 6
 7 CD	 Shift + 7
 8 CD	 Shift + 8
 9 CD	 Shift + 9
 10 CD	 Shift + 0
 CD I<<	 I<< / Preset-
 CD >>I	 >>I / Preset+
 CD Play	 Play / Slow
 Phono	 Blue / Prime Video / Random
 CD Stop	 Stop / Hold
 CD Pause	 Pause / Step / Freeze
 Attenuator +	 Vol+

Original	Replacement
 Attenuator -	 Vol-

