








 


 












Original	Replacement	Original	Replacement
 Power	 Power	 Still	 Pause
 Mute	 Mute	 S.Mode	 Shift + Dual
 1	 1	 Sleep	 Sleep
 2	 2	 Volume+	 Vol +
 3	 3	 Volume-	 Vol -
 4	 4	 Channel+	 Ch +
 5	 5	 Channel-	 Ch -
 6	 6	 PIP On/Off	 Smart
 7	 7	 Source	 Shift + AV
 8	 8	 Size	 Eject
 9	 9	 Swap	 Back
 0	 0	 Up / P-CH +	 Up
 /--	 Guide	 Down / P-CH -	 Down
 Preview	 Pre Ch	 Right	 Right
 Sound	 Dual	 Left	 Left
 Picture	 Shift + Format	 Menu	 Menu
 Aspect	 Format	 Menu	 Ok

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 DUAL	 SUBT
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 PICTURE	 ECO
 PROG	 SEARCH	 FORMAT	 3D
 SLEEP	 REPEAT	 ZOOM	 TIMER
 E-MANUAL	 TEXT	 AV	
 TOP MENU	 DISPLAY	 MENU	 INFO
 CLEAR	 EXIT	 OK	 BACK
 HOME	 SMART	 HOME	 SMART
 VOL +	 APP	 VOL +	 CH +
 VOL -	 MEDIA	 VOL -	 CH -
 1	 2	 3	
 4	 5	 6	
 7	 8	 9	
 /--	 GUIDE	 0	 FAV
 GUIDE	 PRE-CH	 PRE-CH	
 A	 B	 C	 D
 www.mandis.tv			





Original	Replacement
 Exit	 Exit
 TV / AV	 AV
 Info	 Info
 Wiper	 Media
 PC Auto	 Options
 TTX On/Off	 Text
 TTX / Mix	 Shift + Text
 Index	 Shift + Info
 List / FLOF	 Shift + Smart
 Store	 TV/R
 Hold	 Stop
 Reveal	 Shift + Subt
 Subpage	 Subt
 Size	 Shift + Eject
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Replacement
 Blue	 Blue

