



Original	Replacement	Original	Replacement
Power	Power	PC	Media
Source	AV	Mute	Mute
1	1	Vol+	Vol +
2	2	Vol-	Vol -
3	3	P+	Ch +
4	4	P-	Ch -
5	5	Menu	Menu
6	6	Exit	Exit
7	7	Up	Up
8	8	Down	Down
9	9	Right	Right
0	0	Left	Left
TV	GUIDE	Enter	Ok
CH.MGR	Pre Ch	[≡+]/PIP	3D
Sleep	Sleep	[≡?]/Info	Info
		[≡]/[/≡]/TTX/MIX	Text
		Red-/I/I-/P.Mode	Red

Original	Replacement	Original	Replacement
PC	Media	Mute	Mute
Mute	Mute	Vol+	Vol +
Vol+	Vol +	Vol-	Vol -
Vol-	Vol -	P+	Ch +
P+	Ch +	P-	Ch -
P-	Ch -	Menu	Menu
Menu	Menu	Exit	Exit
Exit	Exit	Up	Up
Up	Up	Down	Down
Down	Down	Right	Right
Right	Right	Left	Left
Left	Left	Enter	Ok
Enter	Ok	[≡+]/PIP	3D
[≡+]/PIP	3D	[≡?]/Info	Info
[≡?]/Info	Info	[≡]/[/≡]/TTX/MIX	Text
[≡]/[/≡]/TTX/MIX	Text	Red-/I/I-/P.Mode	Red
Red-/I/I-/P.Mode	Red		





Original	Replacement	Original	Replacement
S.MODE [L-] [R-]	Green/-L-/-S.Mod e	[B]	Green
STILL [ORANGE]	Yellow/Still	[C]	Yellow
P.SIZE [BLUE]	Blue/P.Size	[D]	Blue
SOURCE [≡◇]	[≡◇]/Source	SHIFT + [TIMER AV]	Shift + AV
SWAP [≡◇]	[≡◇]/Swap	[OPT]	Options
SIZE [ORANGE]	Size	[PICTURE FORMAT]	Format
DUAL [I-II]	I-II/Dual	[SOUND DUAL]	Dual
SRS [C-O]	(o)/SRS	[AD SUBT]	Subt
POSITION [←]	[←]/Position	[HOME SMART]	Smart
[P Up]	P Up	[>>]	>>
[P Down]	P Down	[<<]	<<

Original	Replacement

