




 

 

 

 



 
 


 

 

 

 







 

 



 

 





 
 
 

 



 



 














Original	Replacement	Original	Replacement
 Power	 Power	 Tracking/V-Look-	 Ch -
 Pause/Slow	 Pause	 1	 1
 Rec	 Rec	 2	 2
 Index >>I	 >>I	 3	 3
 I<< Index	 I<<	 4	 4
 Up	 Up	 5	 5
 Play	 Play	 6	 6
 Down	 Down	 7	 7
 Stop	 Stop	 8	 8
 Right	 Right	 9	 9
 >>	 >>	 SAT	 0
 <<	 <<	 0/SAT	 0
 Left	 Left	 -/--	 Guide
 Search	 TV/R	 AV	 Shift + AV
 Vol+	 Vol +	 AV	 Smart
 Vol-	 Vol -	 Show View	 Menu
 Tracking/V-Look+	 Ch +	 Menu	 Exit
		 Exit	 Ok
		OK	Ok




 
 
 


 

 
 


 


 














 

 
 







 


 



Original		Replacement		Original	Replacement
	Prog/Check		Sleep		
	Cancel		Back		
	VPS/PDC		Blue		
	SP/LP		Format		
	Timer Rec		3D		
	AV Link		Media		
	OSD/Display		Info		
	Reset		Pre Ch		
	Direct Tv Rec		Shift + Rec		
	Up		List		
	Red/Down		D. Menu		
	Date+		Dual		
	Green/Date-		Text		
	On+		Subt		
	Yellow/On-		Eject		
	Off+		Options		
	Blue/Off-		AV		





Original	Replacement	Original	Replacement
 Power	 Power	 Yellow	 Yellow
 1	 1	 Blue	 Blue
 2	 2	 Tv/Text	 Text
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 -/--	 GUIDE		
 AV	 AV		
 CH+	 Ch +		
 CH-	 Ch -		
 Red	 Red		
 Green	 Green		

Original	Replacement	Original	Replacement
 Yellow	 Yellow	 Blue	 Blue
 Tv/Text	 Text		

