



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / Radio		TV/Radio /
	0		0
	←PR		Back / Return
	EPG		Guide / EPG / -/--
	Up / PR+		CH+ / Page+
	Up / PR+		Up
	Menu		Menu / Home
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK / List		OK
	OK / List		Smart / List
	Right / Vol+		Vol+
	Right / Vol+		Right
	FAV		Fav / Marker / PC
	Down / PR-		CH- / Page-
	Down / PR-		Down
	Exit		Exit / Cancel / Clear
	Red / Find		Red / Netflix / Search
	↑		>> / Preset+
	↑		>> / Tune+
	Green / Zoom		Zoom / Size
	Green / Zoom		Green / APP / Repeat
	↓		<< / Tune-





Original	Replacement	Original	Replacement
	PRESET- I<< / Preset-		
	Blue / LR Prime Video RANDOM		
	Blue / LR LANG I/II AUDIO		
	Yellow / TXT GOTO TEXT		
	Yellow / TXT YouTube REPEAT A-B		
	Pause / Step / Freeze STEP - FREEZE		
	Shift + 0 HDMI - SAT		
	Display / Media MEDIA DISPLAY		
	AV / Input / RDS RDS AV INPUT		
	Sleep / Timer TIMER SLEEP		
	Picture / Format FORMAT PICTURE		
	Info / Angle ANGLE INFO		

