



Original	Replacement	Original	Replacement
 Power	 Power	 Subtitle	 Subt
 Open/Close	 Eject	 I<<	 I<<
 DVD	 Shift + 1	 Step	 Shift + Pause
 TUNER	 Shift + 2	 Pause	 Pause
 PORT	 Shift + 3	 >>I	 >>I
 AUX	 Shift + 4	 <<	 <<
 1 / RDS Display	 1	 Stop	 Stop
 2	 2	 Play	 Play
 3 / TA	 3	 >>	 >>
 4 / PTY-	 4	 Vol+	 Vol +
 5 / PTY Search	 5	 Vol-	 Vol -
 6 / PTY+	 6	 Mute	 Mute
 7	 7	 Remain	 Smart
 8	 8	 Tuning+ / CH+	 Ch +
 9	 9	 Tuning- / CH-	 Ch -
 0	 0	 Menu	 Menu
 Audio	 Dual	 Return	 Back





Original		Replacement		Original		Replacement	
	Up		Up		Slow		List
	Left		Left		Repeat		Text
	Enter		Ok		Zoom		Shift + Eject
	Right		Right		CD Ripping		Rec
	Down		Down		Dimmer		Shift + Mute
	Info		Info		Sleep		Sleep
	Exit		Exit				
	Dolby PL II Mode		Yellow				
	Dolby PL II Effect		Blue				
	DSP / EQ		Format				
	Cancel		Shift + Exit				
	Tuner Memory		Red				
	Mo / St		TV/R				
	P.Bass		Options				
	Sound Edit		Shift + Dual				
	SD / HD		Media				
	Logo		3D				





Original	Replacement	Original	Replacement
 Power	 Power	 CH-	 Ch -
 Mute	 Mute	 Up	 Up
 Menu	 Menu	 Left	 Left
 1	 1	 Enter	 Ok
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Info	 Info
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Source	 AV		
 Vol+	 Vol +		
 Vol-	 Vol -		
 CH+	 Ch +		

