


 

 

 
 
 
 


 
 
 

 
 
 



 
 

 




 



 
 



 





	Original	Replacement		Original	Replacement
	Power	 Power		Subtitle	 Subt
	Eject	 Eject		I<<	 I<<
	DVD	 +  Shift + 1		Step	 +  Shift + Pause
	TUNER	 +  Shift + 2		Pause	 Pause
	PORT	 +  Shift + 3		>>I	 >>I
	AUX	 +  Shift + 4		<<	 <<
	1	 1		Stop	 Stop
	2	 2		Play	 Play
	3	 3		>>	 >>
	4	 4		Vol+	 Vol +
	5	 5		Vol-	 Vol -
	6	 6		Mute	 Mute
	7	 7		Remain	 Smart
	8	 8		Tuning+ / CH+	 Ch +
	9	 9		Tuning- / CH-	 Ch -
	0	 0		Menu	 Menu
	Audio	 Dual		Return	 Back







Original	Replacement	Original	Replacement
	Up		ASC
	Left		Repeat
	Enter		Zoom
	Right		CD Ripping
	Down		Dimmer
	Info		Sleep
	Exit		
	Dolby PL II Mode		
	Dolby PL II Effect		
	DSP / EQ		
	Cancel		
	Tuner Memory		
	Mo/St / Slow		
	P.Bass		
	Sound Edit		
	SD / HD		
	Logo		
	Up		TV/R
	Left		Text
	Ok		Shift + Eject
	Right		Rec
	Down		Shift + Mute
	Info		Sleep
	Exit		
	Yellow		
	Blue		
	Format		
	Shift + Exit		
	Red		
	List		
	Options		
	Shift + Dual		
	Media		
	3D		





Original		Replacement		Original		Replacement	
	Power		Power		CH-		Ch -
	Mute		Mute		Up		Up
	Menu		Menu		Left		Left
	1		1		Enter		Ok
	2		2		Right		Right
	3		3		Down		Down
	4		4		Info		Info
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Source		AV				
	Vol+		Vol +				
	Vol-		Vol -				
	CH+		Ch +				

