









Original	Replacement
Power DVD	Power
Direct Tv Rec	TV/R
Drive Select HDD	Media
Drive Select DVD	Smart
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
* Cancel	Guide
Input Select	AV
CH+	Ch +

Original	Replacement
CH-	Ch -
ShowView	Blue
Manual Skip	Subt
Skip	I<<
Skip	>>I
Slow/Search	<<
Slow/Search	>>
Stop	Stop
Pause	Pause
Play/x1.3	Play
Direct Navigator/Top	Menu
Functions	Options
Sub Menu	D. Menu
Return	Back
Up	Up
Down	Down
Right /	Right





Original	Replacement
 Left / ◀	 Left
 Enter	 Ok
 Prog/Check	 Sleep
 Display	 Info
 Status	 3D
 Time Slip	 Format
 Timer	 Shift + AV
 Erase	 Exit
 Rec Mode	 Shift + Rec
 Rec	 Rec
 (A) Ext Link	 Red
 (B) Dubbing	 Green
 (C) Create Chapter	 Yellow
 Audio	 Dual
 Power Tv	 Shift + Power
 AV Tv	 Eject
 CH+ Tv	 Shift + Ch +

Original	Replacement
 CH- Tv	 Shift + Ch -
 Volume+ Tv	 Vol +
 Volume- Tv	 Vol -

