



Original	Replacement	Original	Replacement
POWER	Power	GUIDE	Guide
MENU	Menu	UP	Up
LAST	Pre Ch	OK	Ok
MUTE	Mute	DOWN	Down
TEXT	Text	LEFT	Left
MODE	TV/R	RIGHT	Right
1	1	VOL+	Vol +
2	2	VOL-	Vol -
3	3	PR-	Ch -
6	6	PR+	Ch +
5	5	SWAP	Shift + Green
4	4	ZOOM	Eject
7	7	RED / MOSAIC	Red
8	8	BACK	Back
9	9	GREEN / SLEEP	Green
FAV	Shift + Pre Ch	YELLOW /	Yellow
0	0	BLUE / LIST	Blue





Original	Replacement
 PAGE DOWN	 Shift + Ch -
 PAGE UP	 Shift + Ch +
 TIME SHIFT	 Smart
 STOP	 Stop
 REC	 Rec
 REW	 <<
 PLAY / PAUSE	 Play
 FWD	 >>
 PLAY / PAUSE	 Pause
 OPTION	 Options
 PIP	 Shift + Red
 TIMER	 AV
 MEDIA	 Media
 PAUSE	 Shift + Yellow
 V. FORMAT	 Format
 INFO	 Info

Original	Replacement

