



Original	Replacement	Original	Replacement
Standby	Shift + Power	HALL	Shift + Display / Media
System Power	Power	3	3
CD	Shift + 3	Jazz	Zoom / Size
MD / CD-R	Shift + TV/Radio / Program	4	4
TUNER	Shift + 6	Rock	Picture / Format
Sleep	Sleep / Timer	Music	Smart / List
DVD	Shift + 2	5	5
DTV/CBL	Back / Return	Entertain	D.Menu / Top
V-AUX	Shift + 7	6	6
Multi CH In	Shift + Smart / List	7	7
VCR	Shift + 4	TV Thtr	TV/Radio /
Volume+	Vol+	Movie	Display / Media
Volume-	Vol-	8	8
Mute	Mute / Dimmer	Dolby DTS	Sound / Title
Stereo	Shift + 1	9	9
1	1	Night	Info / Angle
2	2	0	0





	Original	Replacement	Original	Replacement
	EX/ES	AV / Input / RDS		
	Straight / Effect	Text / Goto		
	Level	Menu / Home		
	Preset/CH+	CH+ / Page+		
	Up	Up		
	Set Menu	Setup / OPT /		
	A/B/C/D/E	Yellow / YouTube / Repeat		
	Left	Left		
	Enter	OK		
	Select	Shift + OK		
	Right	Right		
	Preset/CH-	CH- / Page-		
	Down	Down		

