




 











 















 
 
 



Original	Replacement
	Power
	Display
	Setup
	Mute
	Menu
	Music
	Copy
	Zoom
	TV System
	Browser
	Vol-
	Vol+
	Guide
	Return
	Up
	Left
	Enter

Original	Replacement
	Right
	Down
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Time Shift
	0
	Goto
	Rec
	Play
	Stop





Original	Replacement	Original	Replacement
 Timer	 Sleep / Timer		
 Pause/Step	 Pause / Step / Freeze		
 I>/Slow	 Eject / Surround		
 I<<	 I<< / Preset-		
 Rec List	 Smart / List		
 ←/INS Replay	 CH- / Page-		
 →/CM Skip	 CH+ / Page+		
 >>I	 >>I / Preset+		
 A-B	 Yellow / YouTube / Repeat		
 Subtitle	 Subtitle / EQ		
 Repeat	 Green / APP / Repeat		
 <<	 << / Tune-		
 F1	 D.Menu / Top		
 Source	 AV / Input / RDS		
 Audio	 Audio / Lang I/II		
 >>	 >> / Tune+		

Original	Replacement

