



	Original	Replacement		Original	Replacement
	Power VCR		Power		Tracking/V-Lock-
	Up		Up		Ch -
	Down		Down		1
	Right		Right		2
	Left		Left		3
	Play		Play		4
	Stop		Stop		5
	>>		>>		6
	<<		<<		7
	Pause/Slow		Pause		8
	Rec/OTR		Rec		9
	Display		Info		0
	Zero Stop		Smart		Guide
	Jog/Shuttle On		Media		Input Select
	I<< Index		Media		Vol +
	I>> Index		Media		Vol -
	Tracking/V-Lock+		Ch +		OSD
					Audio Out
					Dual










 


 





 

 

















Original		Replacement		Original		Replacement	
	Tv/AV		Pre Ch		Nothing 1		Shift + AV
	TV CH+		Shift + Ch +		Nothing 2		Shift + Format
	TV CH-		Shift + Ch -		Direct Tv Rec		Options
	Power Tv		Shift + Power		AV Link		Text
	<< Wheel		Shift + Left		Jog/Shuttle ▲		Shift + Media
	Wheel >>		Shift + Right				
	Central Wheel >>		Shift + Up				
	<< Central Wheel		Shift + Down				
	Reset		TV/R				
	Menu		Menu				
	Exit		Exit				
	Store		3D				
	PDC/VPS		Blue				
	SP/LP		Format				
	Timer Rec		Red				
	Check		Green				
	Transmit		Yellow				






 



 
 




 



 





 

 



 





 


 
 



 

 





 








 
 

 

 





	Original	Replacement	Original	Replacement
	Power	 Power		
	Direct Tv Rec	 Options		
	CH+	 Ch +		
	CH-	 Ch -		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	-/--	 Guide		
	Vol+	 Vol +		
	Vol-	 Vol -		





	Original	Replacement		Original	Replacement
	Power VCR	 Power		Index >>I	 >>I
	Up	 Up		Tracking/V.Lock+	 Ch +
	Down	 Down		Tracking/V.Lock-	 Ch -
	Right	 Right		OSD	 Back
	Left	 Left		Audio Out	 Dual
	Play	 Play		Input Select	 AV
	Stop	 Stop		Tv/AV	 Pre Ch
	>>	 >>		1	 1
	<<	 <<		2	 2
	Pause/Slow	 Pause		3	 3
	Rec/OTR	 Rec		4	 4
	Display	 Info		5	 5
	Reset	 TV/R		6	 6
	Zero Stop	 Smart		7	 7
	Jog/Shuttle On	 Media		8	 8
	Jog/Shuttle ▲	 +  Shift + Media		9	 9
	I<< Index	 I<<		0	 0





Original	Replacement	Original	Replacement
-/--	Guide	Check	Green
Vol+	Vol +		
Vol-	Vol -		
Tv CH+	Shift + Ch +		
Tv CH-	Shift + Ch -		
Direct Tv Rec	Options		
AV Link	Text		
Menu	Menu		
Exit	Exit		
Store	3D		
Nothing 1	Shift + AV		
Nothing 2	Shift + Format		
SP/LP	Format		
PDC/VPS	Blue		
Transmit	Yellow		
Power Tv	Shift + Power		
Timer Rec	Red		

