















 

 






 














 








 







 


 
 

 









 



 













 
 












Original	Replacement	Original	Replacement
 []→	 Exit / Cancel / Clear	 [≡]	 Text / Goto
 Power	 Power	 Left	 Left
 [1 2]	 Shift + Red / Netflix /	 OK	 OK
 [← →]	 Shift + Green / APP /	 Right	 Right
 [> <]	 Shift + Yellow / YouTube /	 [> <]	 Pause / Step / Freeze
 Red / Rec	 Rec / Rec Mode	 Down	 Down
 Red / Rec	 Red / Netflix / Search	 [...]	 Subtitle / EQ
 Green / <<	 Green / APP / Repeat	 Vol+	 Vol+
 Green / <<	 << / Tune-	 Mute	 Mute / Dimmer
 Yellow / Stop	 Stop / Hold	 P+	 CH+ / Page+
 Yellow / Stop	 Yellow / YouTube / Repeat	 Vol-	 Vol-
 Blue / Play	 Blue / Prime Video / Random	 P-	 CH- / Page-
 Blue / Play	 Play / Slow	 1	 1
 White / >>	 >> / Tune+	 2	 2
 White / >>	 Fav / Marker / PC	 3	 3
 []	 Shift + Guide / EPG / -/-	 4	 4
 Up	 Up	 5	 5

















 



 

 



 



 











 



 















 









	Original	Replacement	Original	Replacement
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P / -/--	 Guide / EPG / -/--		
	[⊙]	 Sleep / Timer		
	[?]	 AV / Input / RDS		
	[↑↓] / Zoom	 Zoom / Size		
	Smart Sound	 Sound / Title		
	[<>]	 D.Menu / Top		
	Smart Picture	 Picture / Format		
	Instant Rec	 Shift + Rec / Rec Mode		
	I-II	 Audio / Lang I/II		
	DNR	 Back / Return		
	[]	 Setup / OPT /		





Original		Replacement		Original		Replacement	
	DVD		Shift + 2		Vol+		Vol+
	[1 2]		Red / Netflix / Search		Mute		Mute / Dimmer
	[< >]		Green / APP / Repeat		P+		CH+ / Page+
	[> <]		Yellow / YouTube / Repeat		Vol-		Vol-
	<<		<< / Tune-		P-		CH- / Page-
	Stop		Stop / Hold		1		1
	Play		Play / Slow		2		2
	>>		>> / Tune+		3		3
	[]		Shift + Guide / EPG / -/-		4		4
	Up		Up		5		5
	[≡]		Text / Goto		6		6
	Left		Left		7		7
	OK		OK		8		8
	Right		Right		9		9
	[> <]		Pause / Step / Freeze		[i+]		Info / Angle
	Down		Down		0		0
	[...]		Subtitle / EQ		P<P / -/-		Guide / EPG / -/-














 







 
 















 





 












 


 
 









Original	Replacement	Original	Replacement
 Smart Sound	 Sound / Title		
 [<>]	 D.Menu / Top		
 Smart Picture	 Picture / Format		
 Instant Rec	 Rec / Rec Mode		
 Setup / OPT /	 Setup / OPT /		







 



 













 
 












Original		Replacement		Original		Replacement	
	[]→		Exit / Cancel / Clear		[≡]		Text / Goto
	Power		Power		Left		Left
	[1 2]		Shift + Red / Netflix /		OK		OK
	[← →]		Shift + Green / APP /		Right		Right
	[> <]		Shift + Yellow / YouTube /		[> <]		Pause / Step / Freeze
	Red / Rec		Red / Netflix / Search		Down		Down
	Red / Rec		Rec / Rec Mode		[...]		Subtitle / EQ
	Green / <<		Green / APP / Repeat		Vol+		Vol+
	Green / <<		<< / Tune-		Mute		Mute / Dimmer
	Yellow / Stop		Stop / Hold		P+		CH+ / Page+
	Yellow / Stop		Yellow / YouTube / Repeat		Vol-		Vol-
	Blue / Play		Blue / Prime Video / Random		P-		CH- / Page-
	Blue / Play		Play / Slow		1		1
	White / >>		Fav / Marker / PC		2		2
	White / >>		>> / Tune+		3		3
	[]		Shift + Guide / EPG / -/-		4		4
	Up		Up		5		5






 

 
 



 








 










 

 

















 



















	Original	Replacement	Original	Replacement
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P / -/--	 Guide / EPG / -/--		
	[⊙]	 Sleep / Timer		
	[?]	 AV / Input / RDS		
	[↑↓] / Zoom	 Zoom / Size		
	Smart Sound	 Sound / Title		
	[<>]	 D.Menu / Top		
	Smart Picture	 Picture / Format		
	Instant Rec	 Shift + Rec / Rec Mode		
	I-II	 Audio / Lang I/II		
	DNR	 Back / Return		
	[]	 Setup / OPT /		







 









 
 










Original	Replacement	Original	Replacement
	[]→		Exit / Cancel / Clear
	Power		Power
	[1 2]		Red / Netflix / Search
	[← →]		Green / APP / Repeat
	[> <]		Yellow / YouTube / Repeat
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	[]		Shift + Guide / EPG / -/-
	Up		Up
	[≡]		Text / Goto
	Left		Left
	OK		OK
	Right		Right
	[> <]		Pause / Step / Freeze
	Down		Down
	[...]		Subtitle / EQ
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle





Original	Replacement	Original	Replacement
	0		0
	P<P / -/--		Guide / EPG / -/--
	[⊙]		Sleep / Timer
	[?]		AV / Input / RDS
	[↕] / Zoom		Zoom / Size
	Smart Sound		Sound / Title
	[<>]		D.Menu / Top
	Smart Picture		Picture / Format
	Instant Rec		Shift + Rec / Rec Mode
	I-II		Audio / Lang I/II
	DNR		Back / Return
	[]		Setup / OPT /

