

 

 








 


 









Original	Replacement
	 OK
	 Setup / OPT /
	 Back / Return
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Rec / Rec Mode
	 Text / Goto
	 Subtitle / EQ
	 TV/Radio /
	 Sleep / Timer
	 Smart / List
	 +  Shift + Display / Media
	 Sound / Title
	 Picture / Format
	 Audio / Lang I/II

Original	Replacement
	 Fav / Marker / PC
	 AV / Input / RDS
	 +  Shift + Power
	 +  Shift + Vol+
	 +  Shift + Vol-
	 +  Shift + CH+ /
	 +  Shift + CH- /
	 +  Shift + AV / Input / RDS

