
 







 


 

 


 

 



 

 


 


 
 


 
 
 
 




 

 
 





Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Audio Out	 Mute	T.Set/Clock	 +  Shift + AV
Slow Down	 +  Shift + <<	Menu Right	 Right
F.Adv	 Smart	Exit	 Exit
Mon/TV	 Format	Menu Down	 Down
Auto/Track	 Media	Tracking+	 Vol +
Sp/Lp/Speed	 3D	Next	 >>
Stop	 Stop	Tracking-	 Vol -
Pause	 Pause	Audio	 Dual
Slow/Dpss-	 +  Shift + Down	Prev.	 <<
Video/Go-To	 D. Menu	1	 1
Slow/Dpss+	 +  Shift + Up	2	 2
VCR/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	Vps/Pdc	 Options
Display	 +  Shift + Info	5	 5
Menu Left	 Left	6	 6



Original	Replacement	Original	Replacement
7	 7		
8	 8		
9	 9		
-/--	 Guide		
Case Tape	 List		
Audio Dub	 +  Shift + Dual		
Progr/C/CH	 +  Shift + Sleep		
Next Sv+V	 +  Shift + >>I		
0	 0		
Counter/Memor	 Red		
Counter Reset	 Green		
Count Remain	 Yellow		
Mark Add/Del	 +  Shift + 7		
Record	 Rec		
X2 Rew/Play	 +  Shift + Play		
Info/Intro	 Info		
Rewind	 <<		

Original	Replacement	Original	Replacement
F.Forward	 >>		
Skip/Search	 +  Shift + TV/R		
Erase	 +  Shift + 8		
Play	 Play		
Repeat	 Text		
Search Index	 TV/R		
Frame Down	 Ch -		
Timer/Sleep	 Sleep		
Frame Up	 Ch +		

