








 







 

 

 















 


 
 


 




 



 


 
 

 

 









 
 
 

 

 

 

 
 
 


 
 
 
 
 



 




 
 
 




Original	Replacement	Original	Replacement
 Power	 Power	 5	 5
 ▶▶	 ECO 3D	 6	 6
 ←	 RETURN BACK	 7	 7
 SAT	 HOME SMART	 8	 8
 Mute	 MUTE	 9	 9
 TV	 SEARCH TV/R	 0	 0
 [=]	 REPEAT TEXT	 +/-	 GUIDE Guide
 → / []	 TIMER AV	 C	 CLEAR EXIT Exit
 +/-	 SHIFT + TIMER AV Shift + AV	 [=+]	 SHIFT + STOP Shift + Stop
 PIP / Split	 SETTINGS OPT	 ↑	 Up
 PIP to Main	 DISC NAV LIST	 Vol+	 Vol +
 PIP Swap / Split Swap	 FAV PRE-CH	 Vol-	 Vol -
 Split Hold	 SHIFT + PAUSE Shift + Pause	 Prog+	 Ch +
 1	 1	 Prog-	 Ch -
 2	 2	 Red	 Red
 3	 3	 Green	 Green
 4	 4	 Yellow	 Yellow



 

 
 
 


 

 
 


 






Original	Replacement	Original	Replacement
	Blue		Blue
	[≡?][+]		Info
	↔◇		D. Menu
	[Ⓞ]		Sleep
	■		Shift + Format
	Aspect		Format
	♪		Dual
	+		Right
	-		Left
	Menu		Menu
	OK		Ok
	Power Down		Shift + Power
	Prog+ Down		Shift + Ch +
	Prog- Down		Shift + Ch -
	<<		<<
	Play		Play
	>>		>>





Original	Replacement	Original	Replacement
 Power Down	 Power		
 Prog+ Down	 Ch +		
 Prog- Down	 Ch -		
 Stop	 Stop		
 Pause	 Pause		
 Rec	 Rec		
 >>	 >>		
 Play	 Play		
 <<	 <<		

 

 

 




 
 






 




Original	Replacement	Original	Replacement
Power Down	Power		
Prog+ Down	Ch +		
Prog- Down	Ch -		
Stop	Stop		
Pause	Pause		
Rec	Rec		
>>	>>		
Play	Play		
<<	<<		





Original		Replacement		Original		Replacement	
	Power Down		Power				
	Prog+ Down		Ch +				
	Prog- Down		Ch -				
	<<		<<				
	Play		Play				
	>>		>>				
	Stop		Stop				
	Pause		Pause				
	Rec		Rec				

