



Original	Replacement
 Power	 Power
 Display	 Info
 Mute	 Mute
 TV	 Shift + 1
 TV	 TV/R
 AV	 AV
 AV	 Shift + 2
 SCART	 Shift + 3
 PC	 Shift + 4
 CARD / MGW	 Shift + 5
 Sleep	 Sleep
 Wide	 Format
 SRS / BBE	 3D
 1	 1
 2	 2
 3	 3
 4 / Zoom	 4

Original	Replacement
 4 / Zoom	 Eject
 5	 5
 6 / Rotate	 6
 7	 7
 8 / Option	 8
 8 / Option	 Options
 9	 9
 0 / Slide	 0
 Enter	 Shift + Ok
 Menu	 Menu
 CH List	 List
 Up	 Up
 Left	 Left
 Right	 Right
 OK	 Ok
 Down	 Down
 Recall	 Pre Ch





Original	Replacement
Back	Back
EPG	Guide
Vol+	Vol +
Vol-	Vol -
e	Smart
CH/PG+	Ch +
CH/PG-	Ch -
PIP / PBP / POP	Media
Swap	D. Menu
Active	Shift + Right
Position	Shift + Down
Size / Mode	Shift + Left
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
<< / Teletext	<<

Original	Replacement
<< / Teletext	Text
Play/Pause / Hold	Play
Play/Pause / Hold	Pause
Stop / Size	Stop
>> / Subtitle	>>
>> / Subtitle	Subt
I<< / MPX	I<<
>>I	>>I
Shuffle	Shift + TV/R
Repeat	Shift + Text

