














 














 


























 














Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Eject/Open/Close		Eject / Surround		Vol+ Tv		Vol+
	Power Tv		Shift + Power		I.Skip		Blue / Prime Video / Random
	DVD		Shift + 2		0		0
	VCR		Shift + 4		Dubbing		Yellow / YouTube / Repeat
	Av Input		AV / Input / RDS		Vol- Tv		Vol-
	AV Input Tv		Shift + AV / Input / RDS		<<		<< / Tune-
	1		1		>>		>> / Tune+
	2		2		I<<		I<< / Preset-
	3		3		I>>		I>> / Preset+
	PR/CH+ Tv		CH+ / Page+		Pause/step		Pause / Step / Freeze
	4		4		Play		Play / Slow
	5		5		Stop		Stop / Hold
	6		6		Home		Menu / Home
	PR/CH- Tv		CH- / Page-		Up/PR/CH/(TRK)		Up
	7		7		Disc Menu/List		D.Menu / Top
	8		8		Disc Menu/List		Smart / List



