



Original	Replacement	Original	Replacement
On	Power	Muting	Mute / Dimmer
Standby	Shift + Power	Level Down	CH- / Page-
Sleep	Sleep / Timer	Level Up	CH+ / Page+
Return	Back / Return	I<<	I<< / Preset-
Setup	Setup / OPT /	Play	Play / Slow
Disc+	Shift + CH+ /	>>I	>>I / Preset+
Up	Up	<<	<< / Tune-
Vol+	Vol+	Stop	Stop / Hold
Disc-	Shift + CH- /	>>	>> / Tune+
Left	Left	Rec / Random	Rec / Rec Mode
Enter	OK	Pause / Play Rev.	Pause / Step / Freeze
Right	Right	Open / Close	Shift + Eject / Surround
Vol-	Vol-	Input Sel. DVD	2
Down	Down	Input Sel. CD	3
Audio	Audio / Lang I/II	Input Sel. V1	1
CH Sel	Smart / List	Input Sel. V2	4
Test	Text / Goto	Input Sel. T1	5





Original		Replacement		Original		Replacement	
	Input Sel. T2		8				
	Input Sel. V3		7				
	Input Sel. V4		9				
	Input Sel. TUN		6				
	Input Sel. PH		0				
	Stereo		Sound / Title				
	Direct		Red / Netflix / Search				
	DSP ▶	+	Shift + Right				
	SURR		Eject / Surround				
	A.ST		Green / APP / Repeat				
	◀ DSP	+	Shift + Left				
	SP A		Yellow / YouTube / Repeat				
	SP B		Blue / Prime Video / Random				
	Re-EQ		Subtitle / EQ				
	Display		Display / Media				
	Dimmer	+	Shift + Mute / Dimmer				
	Zone 2		AV / Input / RDS				



 





 
 




Original	Replacement	Original	Replacement
	Power		Subtitle / EQ
	+ Shift + Power		I<< / Preset-
	Back / Return		Play / Slow
	Setup / OPT /		>>I / Preset+
	CH+ / Page+		<< / Tune-
	Up		Stop / Hold
	Vol+		>> / Tune+
	CH- / Page-		Blue / Prime Video / Random
	Left		Pause / Step / Freeze
	OK		Eject / Surround
	Right		1
	Vol-		2
	Down		3
	D.Menu / Top		4
	Menu / Home		5
	Mute / Dimmer		6
	Info / Angle		7





Original		Replacement	
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	Search		Red / Netflix / Search

Original		Replacement	





Original		Replacement		Original		Replacement	
	ON		Power		3		3
	STDBY		Shift + Power		4		4
	Disc+		CH+ / Page+		5		5
	Vol+		Vol+		6		6
	Vol-		Vol-		7		7
	Muting		Mute / Dimmer		8		8
	I<<		I<< / Preset-		9		9
	Play		Play / Slow		+10		Guide / EPG / -/-
	>>I		>>I / Preset+		0		0
	<<		<< / Tune-				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Random		Blue / Prime Video / Random				
	Pause		Pause / Step / Freeze				
	Open / Close		Eject / Surround				
	1		1				
	2		2				





Original	Replacement
ON	Power
STDBY	Shift + Power
Vol+	Vol+
Enter	OK
Enter	Fav / Marker / PC
Vol-	Vol-
Muting	Mute / Dimmer
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Rec / Random	Rec / Rec Mode
Rec / Random	Blue / Prime Video / Random
Pause	Pause / Step / Freeze
Open / Close	Eject / Surround

Original	Replacement
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/-
0	0

