






 





 
 
 


 


 




 




















 

 

 



 





 




 
 
 


Original	Replacement	Original	Replacement
 Power	 Power	 ZAP	 D. Menu
 Source	 AV	 Format	 Format
 TV	 Smart	 Mute	 Mute
 VIDEO	 Media	 Up / P+	 Up
 PC	 Shift + Media	 Up / P+	 Ch +
 1	 1	 Down / P-	 Down
 2	 2	 Down / P-	 Ch -
 3	 3	 Right / Vol+	 Right
 4	 4	 Right / Vol+	 Vol +
 5	 5	 Left / Vol-	 Left
 6	 6	 Left / Vol-	 Vol -
 7	 7	 PIP	 TV/R
 8	 8	 Text	 Text
 9	 9	 Menu	 Menu
 0	 0	 >< PIP	 Shift + TV/R
 i	 Info	 Hold / Freeze	 Shift + Stop
 List	 List	 Auto / Page	 3D





Original	Replacement
Sound	Dual
<<	<<
Play	Play
>>	>>
Rec	Rec
Stop	Stop
Pause	Pause
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
F1	Shift + 1
F2	Shift + 2
F3	Shift + 3
F4	Shift + 4
P-Pos	Shift + Options
P-Size	Options

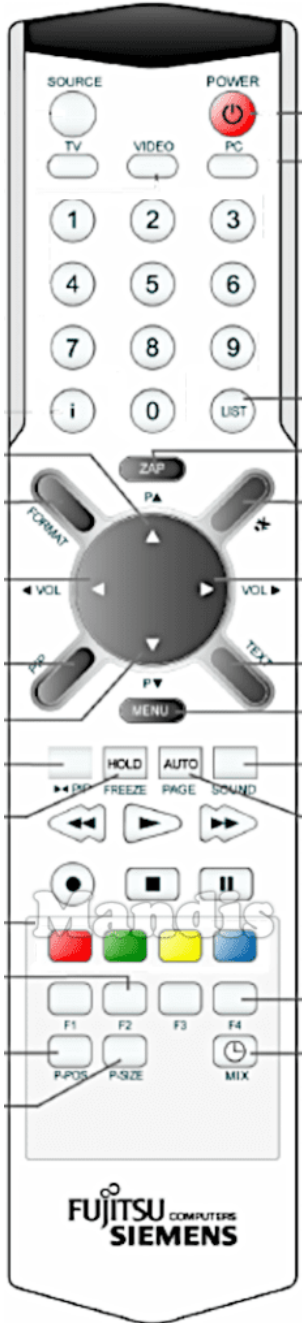Original	Replacement
Sleep / Mix	Shift + Text
Sleep / Mix	Sleep

