
 

 
 


 

 

 


 


 

 


 

 
 
 



 


 

 

 




Original	Replacement	Original	Replacement
 Power	 Power	 << Slow/Search	 <<
 NTSC/PAL	 Format	 Slow/Search >>	 >>
 Open/Close	 Eject	 Stop	 Stop
 1	 1	 Still/Pause	 Pause
 2	 2	 Play	 Play
 3	 3	 Menu	 Menu
 4	 4	 Title	 TV/R
 5	 5	 Display	 Info
 6	 6	 Return	 Back
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 +10	 Guide	 Select	 Ok
 Clear	 Exit	 Subtitle	 Subt
 I<< Skip	 I<<	 Audio	 Dual
 Skip >>I	 >>I	 Angle	 Red





Original	Replacement	Original	Replacement
Prog/Direct	Sleep		
Call	Pre Ch		
Set Up	Options		
Repeat	Text		
A-B Repeat	AV		
Random	3D		

Original	Replacement

