





	Original	Replacement		Original	Replacement
	Power		Power		Ok
	Sub-T		Subt		Pre Ch
	TTX		Text		Exit
	Mute		Mute		Tv/Radio
	Goto		Smart		Recall
	Repeat		Shift + Text		Info
	EPG		Guide		1
	Lang		Dual		2
	Menu		Menu		3
	Page+		Ch +		4
	Page-		Ch -		5
	Up/CH+		Up		6
	Down/CH-		Down		7
	Right		Right		8
	Vol+		Vol +		9
	Vol-		Vol -		0
	Left		Left		<<













 








 




 



 












 











 







 



 




Original		Replacement		Original		Replacement	
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	Play		Play				
	Pause/Timeshift		Pause				
	Stop		Stop				
	Rec		Rec				
	Red/PVR		Red				
	Green/V-Format		Green				
	Yellow/Aspect		Yellow				
	Blue/Timer		Blue				





Original	Replacement	Original	Replacement
 Standby	 Power	 Right / Vol +	 Vol +
 Sub-T	 Subt	 Left / Vol -	 Left
 TTX	 Text	 Left / Vol -	 Vol -
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 FAV	 Shift + Pre Ch
 Lang	 Dual	 TV / Radio	 TV/R
 GOTO	 Shift + Guide	 Recall	 Pre Ch
 Repeat	 Shift + Text	 Info	 Info
 Page +	 Shift + Up	 1	 1
 Page -	 Shift + Down	 2	 2
 Menu	 Menu	 3	 3
 Exit	 Exit	 4	 4
 Up / CH +	 Up	 5	 5
 Up / CH +	 Ch +	 6	 6
 Down / CH -	 Down	 7	 7
 Down / CH -	 Ch -	 8	 8
 Right / Vol +	 Right	 9	 9





Original		Replacement		Original		Replacement	
	0		0				
	<< Rev		<<				
	>> Fwd		>>				
	I<< Prev		I<<				
	>>I Next		>>I				
	Play		Play				
	Pause / Timeshift		Pause				
	Stop		Stop				
	Rec		Rec				
	Red / PVR		Red				
	Green / V-Format		Green				
	Green / V-Format		Format				
	Yellow / Aspect		Yellow				
	Yellow / Aspect		Shift + Format				
	Blue / Timer		Blue				
	Blue / Timer		AV				

