






 
 
 










 
 







 








Original	Replacement
 Power Audio	 Power
 Tv Input	 AV
 Power Source	 Shift + Power
 Menu	 Menu
 Info	 Info
 Exit	 Exit
 Guide	 Guide
 OK / Enter	 Ok
 OK/Enter	 Shift + Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -

Original	Replacement
 Mute	 Mute
 Back	 Back
 DVR	 Smart
 (+)	 Media
 System	 Options
 Play	 Play
 Pause	 Pause
 <<	 <<
 >>	 >>
 Stop	 Stop
 >	 >>
  <	  <<
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original		Replacement		Original		Replacement	
	6		6		TV	+	Shift + 4
	7		7		Bluetooth	+	Shift + 5
	8		8		AUX	+	Shift + 6
	9		9		Rec		Rec
	0		0		CC		D. Menu
	--		Pre Ch				
	[↔]		3D				
	≡		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	↑		Subt				
	↓		Format				
	CBL-SAT	+	Shift + 1				
	BD-DVD	+	Shift + 2				
	Game	+	Shift + 3				

