












































Original	Replacement	Original	Replacement
Power	 Power	CH / Guide	 Guide / EPG / -/--
Recall	 Back / Return	Up	 Up
CC	 Subtitle / EQ	M	 Menu / Home
Text	 Text / Goto	A / CH	 Info / Angle
Smart	 Smart / List	Down	 Down
Sleep	 Sleep / Timer	Vol+	 Vol+
1	 1	Vol-	 Vol-
2	 2	Left / -	 Left
3	 3	Right / +	 Right
4	 4	Mute	 Mute / Dimmer
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	G	 Shift + Yellow / YouTube / Repeat

Original	Replacement	Original	Replacement
Power	 Power	CH / Guide	 Guide / EPG / -/--
Recall	 Back / Return	Up	 Up
CC	 Subtitle / EQ	M	 Menu / Home
Text	 Text / Goto	A / CH	 Info / Angle
Smart	 Smart / List	Down	 Down
Sleep	 Sleep / Timer	Vol+	 Vol+
1	 1	Vol-	 Vol-
2	 2	Left / -	 Left
3	 3	Right / +	 Right
4	 4	Mute	 Mute / Dimmer
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	G	 Shift + Yellow / YouTube / Repeat


































 





Original	Replacement	
Clock	SHIFT + TIMER SLEEP	Shift + Sleep / Timer
E	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
F	SHIFT + APP REPEAT	Shift + Green / APP /
A / V	RDS AV INPUT	AV / Input / RDS

Original	Replacement





Original	Replacement	Replacement
Power		Power
Recall		Back / Return
CC		Subtitle / EQ
Text		Text / Goto
Smart		Smart / List
Sleep		Sleep / Timer
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Reset		Exit / Cancel / Clear

Original	Replacement	Replacement
Up		Up
CH / Guide		Guide / EPG / -/--
Down		Down
M		Menu / Home
Vol+		Vol+
A / CH		Info / Angle
Vol-		Vol-
Mute		Mute / Dimmer
Left / -		Left
Right / +		Right
CH+		CH+ / Page+
CH-		CH- / Page-
A		Red / Netflix / Search
B		Green / APP / Repeat
C		Yellow / YouTube / Repeat
D		Blue / Prime Video / Random
Clock	 + 	Shift + Sleep / Timer




























 










Original	Replacement		Original	Replacement
E	+ SHIFT + Red / Netflix /			
F	+ SHIFT + Green / APP /			
G	+ SHIFT + Yellow / YouTube /			
A / V	RDS AV INPUT AV / Input / RDS			











Original	Replacement	Original	Replacement
Power	 Power	CH / Guide	 Guide / EPG / -/--
Recall	 Back / Return	Up	 Up
CC	 Subtitle / EQ	Down	 Down
Text	 Text / Goto	A / CH	 Info / Angle
Smart	 Smart / List	M	 Menu / Home
Sleep	 Sleep / Timer	Right / +	 Right
1	 1	Left / -	 Left
2	 2	Vol+	 Vol+
3	 3	Vol-	 Vol-
4	 4	Mute	 Mute / Dimmer
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	E	 Shift + Red / Netflix / Search





Original	Replacement	Original	Replacement
F	 +  Shift + Green / APP /		
G	 +  Shift + Yellow / YouTube /		
Clock	 +  Shift + Sleep / Timer		
A / V	 AV / Input / RDS		

