





































Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Swap	 Smart / List
 0	 0
 Back	 Back / Return
 FAV	 Fav / Marker / PC
 Subtitle	 Subtitle / EQ
 i	 Info / Angle

Original	Replacement
 Text	 Text / Goto
 Vol+	 Vol+
 Page+	 Shift + CH+ /
 P+	 CH+ / Page+
 Vol-	 Vol-
 Page-	 Shift + CH- /
 P-	 CH- / Page-
 AD	 Shift + Audio / Lang I/II
 Audio	 Audio / Lang I/II
 Sound	 Sound / Title
 Guide	 Guide / EPG / -/-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Original	Replacement	Original	Replacement
Exit	Exit / Cancel / Clear		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
Stop	Stop / Hold		
Rec	Rec / Rec Mode		
<<	<< / Tune-		
>>	>> / Tune+		
<<	<< / Preset-		
>>	>> / Preset+		
Timer	Sleep / Timer		
V-Format	Picture / Format		
Media	Display / Media		
Aspect	Zoom / Size		

