 

 

 






 

 

 
 


 




 
 






 

 

 
 











 



 

 







 
 







Original	Replacement	Original	Replacement
	Power		Power
	USB		Smart
	Radio		TV/R
	Coax		3D
	AUX		AV
	MP3 Link		Media
	Audio		Dual
	Setup		Menu
	Back		Back
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	>>		>>
	<<		<<
	<		<<
	Play/Pause		Play
	>		>>
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Surround		Options
	Treble		Ch +
	Bass		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





	Original	Replacement		Original	Replacement
	8	8		8	8
	9	9		9	9
	0	0		0	0
	SUBTITLE	Subtitle		AD SUBT	Subt
	AUDIO SYNC	Audio Sync		FAV PRE-CH	Pre Ch
	REPEAT PROGRAM	Repeat/Program		REPEAT TEXT	Text
	REPEAT A-B	Repeat A-B		DISC NAV LIST	List
	ZOOM	Zoom		ZOOM	Eject
	SOUND MODE	Sound Mode		B	Green

	Original	Replacement		Original	Replacement

