


 
 
 
 
 

 
 





 



 




 
 

 






 
 
 
 
 







	Original	Replacement		Original	Replacement
	Power		Power		Up
	Open/Close		Eject		Subt
	Repeat		Text		Down
	Disc Menu		D. Menu		Left
	Video Sel		AV		Dual
	>>		>>		Right
	USB		Media		Options
	Marker		Pre Ch		Ok
	<<		<<		Smart
	Repeat A-B		TV/R		
	Play/Pause		Play		
	Stop		Stop		
	>>		>>		
	<<		<<		
	Menu		Menu		
	Return		Back		
	Info		Info		

