




 


 






 


 
 
 

 
 
 


 



 

 

 



 





 



 

 



 



 



 

 
 
 








Original		Replacement		Original		Replacement	
	Power		Power		P+		Ch +
	Tv		TV/R		P-		Ch -
	PRE CH		Pre Ch		Menu		Menu
	0		0		Exit		Exit
	1		1		Return		Back
	2		2		Tools		Options
	3		3		Guide		Guide
	4		4		Enter		Ok
	5		5		Up		Up
	6		6		Down		Down
	7		7		Left		Left
	8		8		Right		Right
	9		9		CH LIST		List
	Vol+		Vol +		Info		Info
	Vol-		Vol -		TTX/MIX		Text
	Mute		Mute		SUBT		Subt
	Source		AV		SRS		Smart





Original		Replacement		Original		Replacement	
	P SIZE		Format				
	Dual		Dual				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	<<		<<				
	>>		>>				
	Rec		Rec				
	AD		Shift + Subt				
	FAV CH		Shift + Pre Ch				

