





Original	Replacement
 Power	 Power
 DVD	 Shift + 2
 Open / Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Return	 Back / Return
 0	 0
 Display	 Display / Media
 Disc Menu	 D.Menu / Top
 Up	 Up

Original	Replacement
 System Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 I<<	 I<< / Preset-
 Down	 Down
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause / Step	 Pause / Step / Freeze
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat










 

 

 

 


















Original	Replacement	Original	Replacement
REPEAT A-B	 Yellow / YouTube / Repeat		
PROGRAM	 TV/Radio /		
CLEAR	 Exit / Cancel / Clear		
TITLE	 Sound / Title		
SHUFFLE	 Blue / Prime Video / Random		





Original	Replacement
	 Power
	 TV / Video
	 VCR
	 Eject / Surround
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Display / Media
	 Up
	 Menu / Home

Original	Replacement
	 Left
	 OK
	 Right
	 I<< / Preset-
	 Down
	 >>I / Preset+
	 Stop / Hold
	 Play / Slow
	 Pause / Step / Freeze
	 Fav / Marker / PC
	 Red / Netflix / Search
	 AV / Input / RDS
	 Rec / Rec Mode
	 TV/Radio /
	 Exit / Cancel / Clear
	 Sound / Title
	 Zoom / Size





Original	Replacement
 Show View / Video Plus	 Smart / List

Original	Replacement

