 

 

 

 

 

 

 

 

 

 

 

 

 

 

 











 











 



















| Original | Replacement | Original | Replacement |
|---|------------------|---|----------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Info |  | Info / Angle |
|  | 0 |  | 0 |
|  | EPG |  | Guide / EPG / -/- |
|  | Settings |  | Setup / OPT / |
|  | Input |  | AV / Input / RDS |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Back |  | Back / Return |
|  | Menu |  | Menu / Home |
|  | NETFLIX |  | Shift + Red / Netflix / |
|  | YouTube |  | Shift + Yellow / YouTube / |
|  | prime video |  | Shift + Blue / Prime |
|  | Google Play |  | Shift + Green / APP / |
|  | Vol+ |  | Vol+ |
|  | Google Assistant |  | Smart / List |
|  | P+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Home |  | D.Menu / Top |
|  | Home |  | Display / Media |
|  | P- |  | CH- / Page- |





| Original | Replacement | Original | Replacement |
|---|---|----------|-------------|
|  Text |  Text / Goto | | |
|  USB |  Shift + 8 | | |
|  I/II |  Audio / Lang I/II | | |
|  Subt |  Subtitle / EQ | | |
|  Play / Text Mix |  Play / Slow | | |
|  Pause |  Pause / Step / Freeze | | |
|  Stop / Text Hold |  Stop / Hold | | |
|  Text Size |  Zoom / Size | | |
|  << / Text |  << / Tune- | | |
|  I<< / Text Index |  I<< / Preset- | | |
|  >>I / Text Reveal |  >>I / Preset+ | | |
|  >> / Text Cancel |  >> / Tune+ | | |
|  Red |  Red / Netflix / Search | | |
|  Green |  Green / APP / Repeat | | |
|  Yellow |  Yellow / YouTube / Repeat | | |
|  Blue |  Blue / Prime Video / Random | | |

