


 







 



 
















 



 


 

 





 









 














Original		Replacement		Original		Replacement	
	Power		Power		Left		Left
	Mute		Mute		Vol-		Vol -
	Play		Play		Info		Info
	Pause		Pause		Return/Exit		Back
	Stop		Stop		Setup		Options
	<<		<<		DVD/DVB		Smart
	>>		>>		Goto		Media
	I<<		I<<		1		1
	>>I		>>I		2		2
	Record		Rec		3		3
	OK		Ok		4		4
	Up		Up		5		5
	CH+		Ch +		6		6
	CH-		Ch -		7		7
	Down		Down		8		8
	Right		Right		9		9
	Vol+		Vol +		0		0





Original		Replacement		Original	Replacement
	Prog		Sleep		
	Title/TTX		Text		
	Audio		Dual		
	Subtitle		Subt		
	Slow		3D		
	EPG		Guide		
	Tv/Radio		TV/R		
	Open/Close		Eject		
	Favorite		Pre Ch		
	Red/Repeat		Red		
	Red/Repeat	 + 	Shift + Text		
	Green/A-B		Green		
	Yellow/Menu		Yellow		
	Yellow/Menu		Menu		
	Blue/Angle		Blue		
	PN		AV		

