














 



 







 



 

 

 



 

 





 





 

 



 












Original		Replacement		Original		Replacement	
	Power		Power		Yellow / FAV		Pre Ch
	Mute		Mute		Blue / SLP		Blue
	Up / CH+		Up		Zoom		Eject
	Up / CH+		Ch +		Freeze		Pause
	Left / Vol-		Left		Blue / SLP		Sleep
	Left / Vol-		Vol -		DSP / CAPS		Info
	Right / Vol+		Right		Recall		Back
	Right / Vol+		Vol +		1		1
	Down / CH-		Ch -		2		2
	Down / CH-		Down		3		3
	Enter		Ok		4		4
	Menu		Menu		5		5
	Red / P.M		Red		6		6
	Red / P.M		Format		7		7
	Green / S.M		Green		8		8
	Green / S.M		Shift + Dual		9		9
	Yellow / FAV		Yellow		0		0





Original	Replacement	Original	Replacement
	-/--		
	Guide		
	AV		
	Smart		
	Media		
	+  Shift + Smart		
	TV/R		
	+  Shift + AV		
	Dual		
	Exit		
	Text		
	+  Shift + Text		
	Stop		
	Options		
	Subt		
	+  Shift + Eject		

