







































































Original	Replacement	Original	Replacement
 Standby	 Shift + Mute / Dimmer	 Info	 Info / Angle
 Mute	 Mute / Dimmer	 Left	 Left
 ATV	 Shift + AV / Input / RDS	 OK	 OK
 TV / Radio	 TV/Radio /	 Right	 Right
 TV Guide	 Guide / EPG / -/-	 Menu	 Menu / Home
 USB	 Shift + 8	 Down	 Down
 S.Mode	 Sound / Title	 Exit	 Exit / Cancel / Clear
 USB I<<	 I<< / Preset-	 1	 1
 USB >>I	 >>I / Preset+	 2	 2
 USB Stop	 Stop / Hold	 3	 3
 P.Mode	 Picture / Format	 4	 4
 USB <<	 << / Tune-	 5	 5
 USB >>	 >> / Tune+	 6	 6
 USB Play/Pause	 Shift + Play /	 7	 7
 USB Play/Pause	 Play / Slow	 8	 8
 AV Source	 AV / Input / RDS	 9	 9
 Up	 Up	 0	 0





Original	Replacement
	Back / Return
	Fav / Marker / PC
	Vol+
	Subtitle / EQ
	+  Shift + Picture / Format
	CH+ / Page+
	Vol-
	Audio / Lang I/II
	Sleep / Timer
	CH- / Page-
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Eject / Surround
	+  Shift + Back / Return

Original	Replacement
	Power
	+  Shift + Power
	Zoom / Size
	+  Shift + Stop /
	+  Shift + 3

