







































































| Original | Replacement | Original | Replacement |
|--|--|---|---|
|  Standby |  Shift + Mute / Dimmer |  Info |  Info / Angle |
|  Mute |  Mute / Dimmer |  Left |  Left |
|  ATV |  Shift + AV / Input / RDS |  OK |  OK |
|  TV / Radio |  TV/Radio / |  Right |  Right |
|  TV Guide |  Guide / EPG / -/-- |  Menu |  Menu / Home |
|  USB |  Shift + 8 |  Down |  Down |
|  S.Mode |  Sound / Title |  Exit |  Exit / Cancel / Clear |
|  USB I<< |  I<< / Preset- |  1 |  1 |
|  USB >>I |  >>I / Preset+ |  2 |  2 |
|  USB Stop |  Stop / Hold |  3 |  3 |
|  P.Mode |  Picture / Format |  4 |  4 |
|  USB << |  << / Tune- |  5 |  5 |
|  USB >> |  >> / Tune+ |  6 |  6 |
|  USB Play/Pause |  Shift + Play / |  7 |  7 |
|  USB Play/Pause |  Play / Slow |  8 |  8 |
|  AV Source |  AV / Input / RDS |  9 |  9 |
|  Up |  Up |  0 |  0 |



