


 






Original	Replacement	Original	Replacement
	Power		Vol-
	TV/VTR		Play / Slow
	Eject		Stop / Hold
	1		Pause / Step / Freeze
	2		>> / Tune+
	3		>>  / Preset+
	4		I<< / Preset-
	5		Smart / List
	6		<< / Tune-
	7		Exit / Cancel / Clear
	8		Shift + >>  / Preset+
	9		Up
	0		Shift + I<< / Preset-
	Guide / EPG / -/--		Down
	Prog+ / CH+ / Page+		Right
	Prog- / CH- / Page-		Left
	Vol+		Menu / Home





Original	Replacement
 Execute	 Blue / Prime Video / Random
 Input Select	 AV / Input / RDS
 Audio Monitor	 Audio / Lang I/II
 Time Clear	 Shift + Exit / Cancel / Clear
 Auto/Manu	 Setup / OPT /
 Tracking Normal/Slow ▼	 Shift + CH- /
 Display	 Display / Media
 Tracking Normal/Slow ▲	 Shift + CH+ /
 Counter Reset	 Back / Return
 Rec	 Rec / Rec Mode
 Tape Speed SP/LP	 Zoom / Size
 Still Adjust I> Slow+	 Shift + >> /
 Still Adjust I> Slow-	 Shift + << /
 Quick Timer	 Sleep / Timer
 Timer Check	 Shift + Sleep / Timer
 Showview	 Picture / Format
 VPS/PDC	 D.Menu / Top

Original	Replacement
 Once	 Red / Netflix / Search
 Daily	 Green / APP / Repeat
 Weekly	 Yellow / YouTube / Repeat





Original	Replacement	Original	Replacement
	Power		CH- / Page-
	Display		Audio / Lang I/II
	TV/Radio /		Red / Netflix / Search
	1		Green / APP / Repeat
	2		Yellow / YouTube / Repeat
	3		Blue / Prime Video / Random
	4		Text / Goto
	5		Smart / List
	6		
	7		
	8		
	9		
	0		
	Guide / EPG / -/--		
	Vol+		
	Vol-		
	CH+ / Page+		

