







 



 

 



 

 

 

 
 
 
 
 

 
 
 
 




| Original  | Replacement   |
|---|---|
|  Power             |  Power         |
|  Input             |  AV            |
|  Power Tv          |  Shift + Power |
|  Input Tv          |  Shift + AV    |
|  Tv Vol+           |  Shift + Vol + |
|  Tv Vol-           |  Shift + Vol - |
|  Tv CH+            |  Shift + Ch +  |
|  Tv CH-            |  Shift + Ch -  |
|  Sound Field +     |  Ch +          |
|  Sound Field -     |  Ch -          |
|  STD               |  Options       |
|  Movie            |  Dual         |
|  Game            |  Media       |
|  Music           |  List        |
|  P.Audio         |  Smart       |
|  Stereo          |  Subt        |
|  Speaker/Tv↔Audi |  TV/R        |

| Original   | Replacement   |
|--|---|
|  Display  |  Info    |
|  Return   |  Back    |
|  AMP Menu |  Menu    |
|  Vol+     |  Vol +   |
|  Vol-     |  Vol -   |
|  Muting   |  Mute    |
|  Up       |  Up      |
|  Down     |  Down    |
|  Right    |  Right   |
|  Left     |  Left    |
|  OK       |  Ok      |
|  I<<     |  I<<    |
|  Pause  |  Pause |
|  >>I    |  >>I   |
|  <<     |  <<    |
|  Play   |  Play  |
|  >>     |  >>    |



