 

 

 

 
 
 


 

 





 


 

 



 


 
 

 
 
 

 

 



 
 
 
 

 
 

 
 





 
 
 




 


 
 





 

 
 

 










 

 
 




Original	Replacement	Original	Replacement
 Standby	 Power	 Recall	 Back
 Mute	 Mute	 Rec List	 Shift + Smart
 PMode	 Shift + Format	 Rec	 Rec
 SMode	 Shift + Dual	 Time Shift	 Smart
 Sleep	 Sleep	 Red	 Red
 Aspect	 Format	 Green	 Green
 1	 1	 Yellow	 Yellow
 2	 2	 Blue	 Blue
 3	 3	 Display	 Info
 4	 4	 Source	 AV
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 Right	 Right
 9	 9	 Down	 Down
 0	 0	 Menu	 Menu
 Nicam	 Dual	 Exit	 Exit





Original		Replacement		Original		Replacement	
	Vol+		Vol +				
	Vol-		Vol -				
	TV/Radio		TV/R				
	Subtitle		Subt				
	CH+		Ch +				
	CH-		Ch -				
	Text		Text				
	Play/Pause / Rev		Play				
	Play/Pause / Rev		Pause				
	Hold		Shift + Stop				
	I<< / Index		I<<				
	Stop / Size		Stop				
	>>I / Sub.P		>>I				
	FAV		Pre Ch				
	>>		>>				
	<<		<<				

