

 











 




 











 

 
 










 






















 



 



 
 
 

 

 





Original		Replacement		Original		Replacement	
	On / Standby		Power		Preset+		>>
	Input Selector		1		Disc/Album-		Ch -
	Input Selector VCR/DVR		2		Preset-		<<
	Input Selector CBL/SAT		3		Vol+		Vol +
	Input Selector GAME/TV		4		Vol-		Vol -
	Input Selector		5		Muting		Mute
	Input Selector Tuner		6		SP A/B		Menu
	Input Selector CD		7		Up		Up
	Input Selector Phono		8		Left		Left
	D.TUN		Play		Enter		Ok
	Dimmer		Shift + Mute		Right		Right
	Sleep		Sleep		Down		Down
	Band		Pause		Setup		Options
	FM Mode		Stop		Return		Back
	Tuning+		>>		Tape Rev. Play		Shift + Pause
	Tuning-		<<		Tape Play		Shift + Play
	Disc/Album+		Ch +		Tape Stop		Shift + Stop





Original		Replacement		Original		Replacement	
	Tape <<		Shift + <<				
	Tape >>		Shift + >>				
	Tape I<<		Shift + I<<				
	Tape >>I		Shift + >>I				
	Stereo		Red				
	Direct		Green				
	Pure A		Yellow				
	Display		Info				

