














 










 



 










 






Original	Replacement	Original	Replacement
 Standby	 Power	 >>I/Subpage	 >>I / Preset+
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 Red	 Red / Netflix / Search	 Up	 Up
 Green	 Green / APP / Repeat	 Exit	 Exit / Cancel / Clear
 Yellow	 Yellow / YouTube / Repeat	 Left	 Left
 Blue	 Blue / Prime Video / Random	 Enter	 OK
 e	 Info / Angle	 Right	 Right
 Mouse	 Smart / List	 Play/Pause / Timeshift	 Pause / Step / Freeze
 Home	 Shift + Home / Menu /	 Play/Pause / Timeshift	 Play / Slow
 TXT	 Text / Goto	 Down	 Down
 Mix/FAV.List	 Fav / Marker / PC	 Stop / EPG	 Stop / Hold
 Size/Subtitle	 Subtitle / EQ	 Vol+	 Vol+
 Cancel/Audio	 Audio / Lang I/II	 Mute	 Mute / Dimmer
 Record	 Rec / Rec Mode	 CH+ / Page+	 CH+ / Page+
 <</Index	 << / Tune-	 Vol-	 Vol-
 >>/Hold	 >> / Tune+	 Tv/Radio	 TV/Radio /
 I<</Reveal	 I<< / Preset-	 CH-	 CH- / Page-





Original		Replacement		Original		Replacement	
1	1	TV 1	1				
2	2	DVD 2	2				
3	3	CD - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
DISPLAY	[*]/Display	MEDIA DISPLAY	Display / Media				
0	0	HDMI - BAT 0	0				
RECALL	Recall	RETURN BACK	Back / Return				

