






 

 



 

 



 

 


 


 



 



 



 

 




 






 





 















	Original	Replacement	Original	Replacement
	 Power	 Power	 Right	 Right
 1	1	 1	 Vol+	 Vol +
 2	2	 2	 Left	 Left
 3	3	 3	 Vol-	 Vol -
 4	4	 4	 OK	 Ok
 5	5	 5	 TV	 TV/R
 6	6	 6	 Menu	 Menu
 7	7	 7	 ?	 Smart
 8	8	 8	 A	 Red
 9	9	 9	 B	 Green
 0	0	 0	 Blue/Picture Up	 SHIFT +  Shift + Up
 -/--	-/--	 GUIDE	 Blue/Picture Down	 SHIFT +  Shift + Down
 Mute	MUTE	MUTE	 Yellow/Sound	 SHIFT +  Shift + Right
 P+	Up	 Up	 Yellow/Sound	 SHIFT +  Shift + Left
 P+	P+	 Ch +	 White Up	 D Blue
 P-	Down	 Down	 White Down	 C Yellow
 P-	P-	 Ch -	 Sleep	 SLEEP Sleep





Original	Replacement	Original	Replacement
AV	AV	Rec VTR	Rec
Text Info	Info	AV VTR	Shift + AV
Text Info	Text		
← PRG	Back		
♪	Dual		
[♦]	Format		
	Pause		
Power VTR	Shift + Power		
Timer VTR	Pre Ch		
>> VTR	>>		
<< VTR	<<		
Play VTR	Play		
Stop VTR	Stop		
Pause VTR	Shift + Pause		
Step VTR	Shift + Play		
>>I VTR	>>I		
I<< VTR	I<<		

Original	Replacement
Rec VTR	Rec
AV VTR	Shift + AV

